

ATTENTION ! ! ! !

General Instructions for Operation with Powerspeed nozzle

Performance and lifetime of the nozzle can be greatly reduced by incorrect operation, any mechanic shock or incorrect installation of repair-kit.

Important before and during work

- Ensure that no dirt/rust particles penetrate the nozzle. Replace the micro filter insert of the HPCExtreme at regular intervals. NEVER run the machine without the inlet filter. Only original filter inserts to be used.
- At **every** start-up, point the lance/nozzle **downwards**. After working pressure has been achieved, the Powerspeed nozzle can be turned into working position.
- Never drop or strike the nozzle onto the deck or use it as a hammer or anything else that result in a mechanic shock.
- Ensure proper conical blast and typical blasting sound (visual and audible check).

After work

- If sea water has been used, thoroughly flush the nozzle with fresh (sweet) water.
- Clean the nozzle on the outside and store it in a clean, frost-protected area.

Repair / change nozzle kit

- The nozzle repair kit must be installed strictly in accordance with instructions provided. Wrong installation will result in greatly reduced performance and lifetime.

